



A

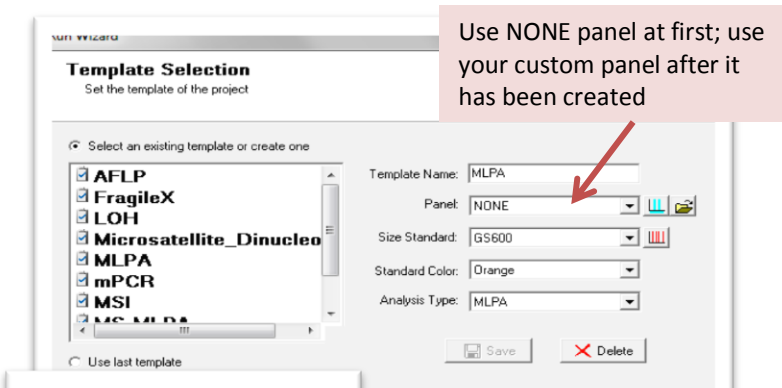

B

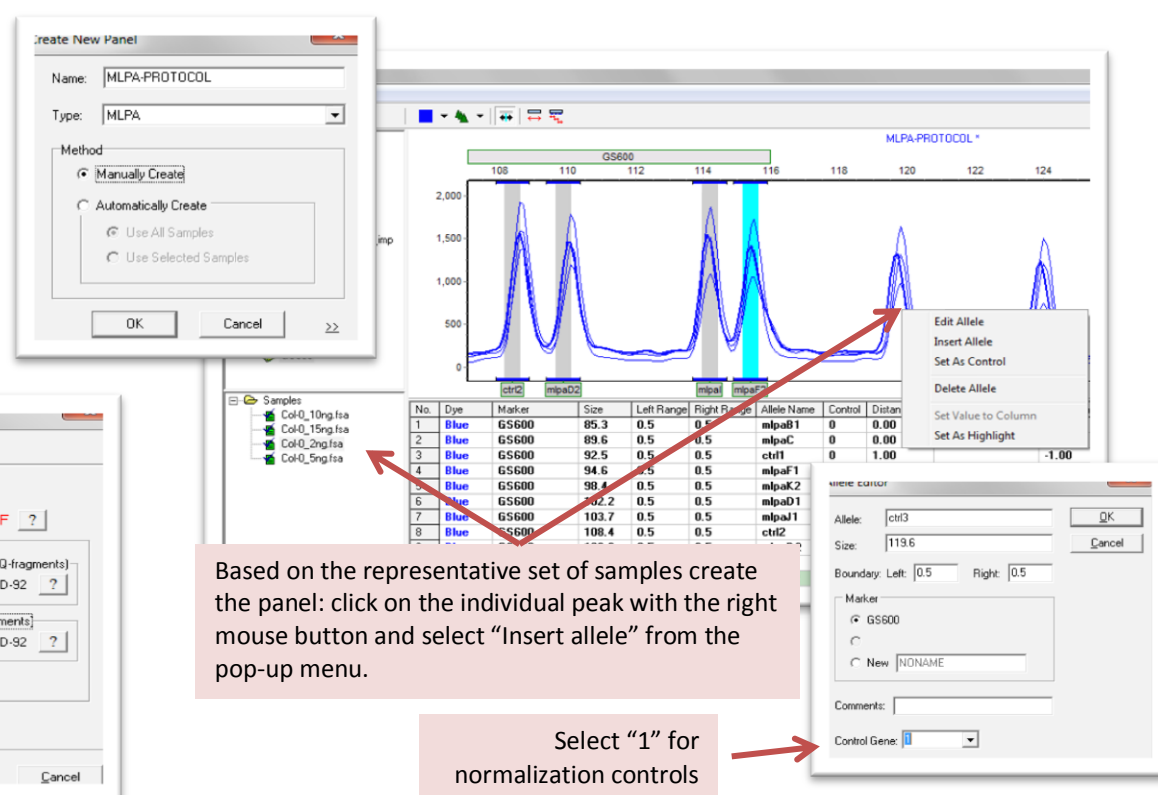

Select MLPA analysis type and chose options

Turn off the quality control based on MRC Holland commercial probes

Based on the representative set of samples create the panel: click on the individual peak with the right mouse button and select "Insert allele" from the pop-up menu.

Select "1" for normalization controls

C

